


Technical Data Sheet

Aegean Ear Defender

Excellent protection throughout the frequency range



Helmet compatibility:	Centurion Vision, Concept, 1125, 1100, Miner and Vulcan Safety Helmets
Attenuation:	SNR = 30dB, H = 34dB, M = 27dB, L = 20dB
Packaging:	10 per box, box size 48 x 29.5 x 16.5cm, box weight 3.1kg
Code:	S42CE: supplied with Euro 30mm slot clips (S565) for use with Euro Vision, Concept, 1125, 1100 helmets and with Connect clips (S570) for use with 1125 reduced peak, 1100 reduced peak, Miner and Vulcan helmets.

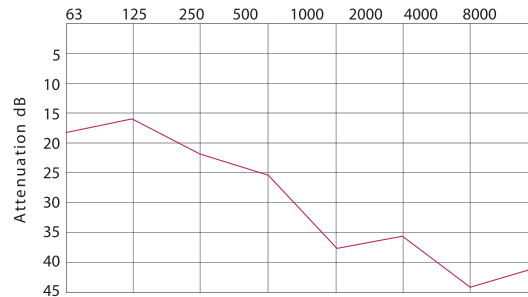

Cup:	ABS (Acrylonitrile-Butadiene-Styrene)
Foam:	Open cell foam
Cushion:	Foam filled PVC



European Standard - EN 352-3

EN 352-3 tests include:

Headband force: tested in accordance with EN 13819-1:2002, 4.4 - force shall be no greater than 14 Newtons (1.4kg of pressure)

Ignitability: tested in accordance with EN 13819-2:2002, 4.1 no part of ear muffs shall ignite upon application of a heated rod

Storage:

- Can be stored and transported in their original cartons at ambient temperature (0°C to + 30°C)
- May be stored in the dark for up to **5 years**
- Do not store in direct/high heat or sunlight as this may distort the shell

Lifetime:

- The Centurion Ear Defender has an in-use life to up to **5 years**
- Excessive wear and tear can considerably reduce the lifespan of the product

- Clean using warm soapy water and soft cloth
- **Do not** use solvents or abrasives